

ALUMINUM NON-SLIP STAIR TREADS (Pat #USD594, 596)


Your HANDI-TREADS packaging includes installation screws.

You will need these tools to complete the installation:

- a tape measure
- a power drill or screw driver




There are 5 steps included in the proper installation of Handi-Treads on wood. The process is the same if you are installing one tread or one hundred. If you find that you have any questions, don't hesitate to call us.

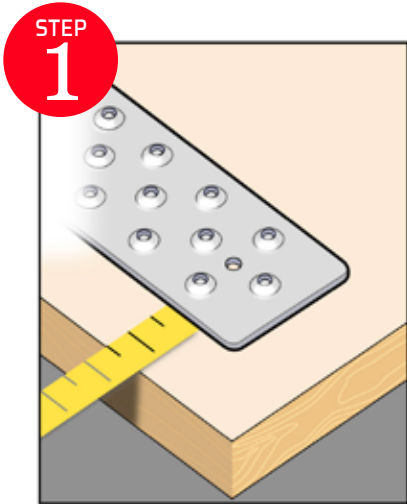

STEP
1


Align your Handi-Tread 3/4" from the front edge of the stair tread and centered in the step.

handi-treads.com
is full of useful tips
to install your treads

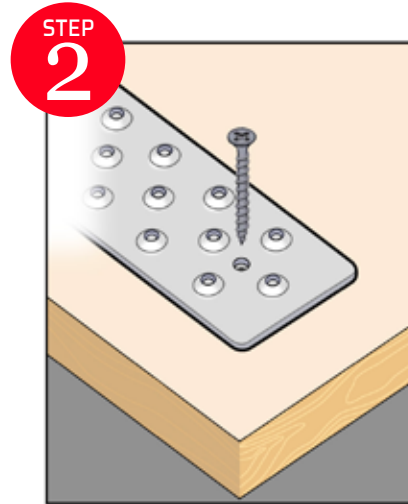

STEP
2


Starting with the middle screw holes, drill your screws into the stair working your way out from the center. Make sure that you are drilling perpendicular to the surface and that you use all of the screw holes provided. Installation is complete once all screws have been drilled into place.

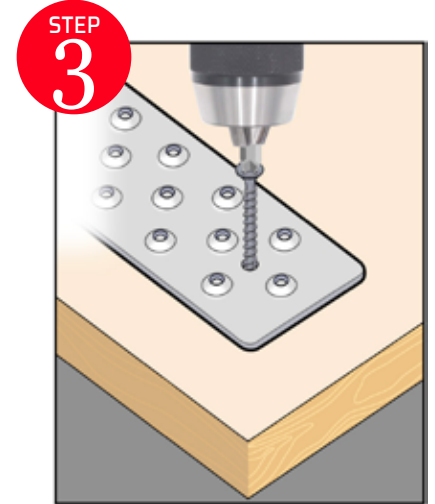


STEP
3

That's it! Your Handi-Tread is installed. There's no additional maintenance necessary.

Note that the screw holes are not raised; DO NOT use the raised traction bumps for your screw placement.

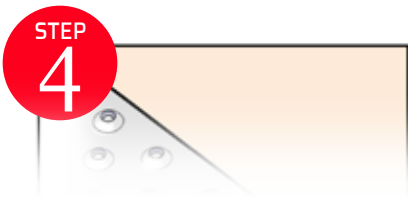

STEP
4

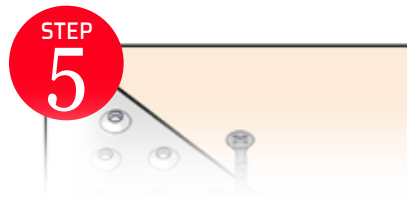

STEP
5

When you have completed the installation of your treads, there are a few final checks you can perform: